



Gottlieb 80B & SYS 3 +5VDC Power Supply Install Notes

1. Unplug connectors and remove the four mounting screws on the heat sink(1/4" nut driver). Remove the original board and heat sink.

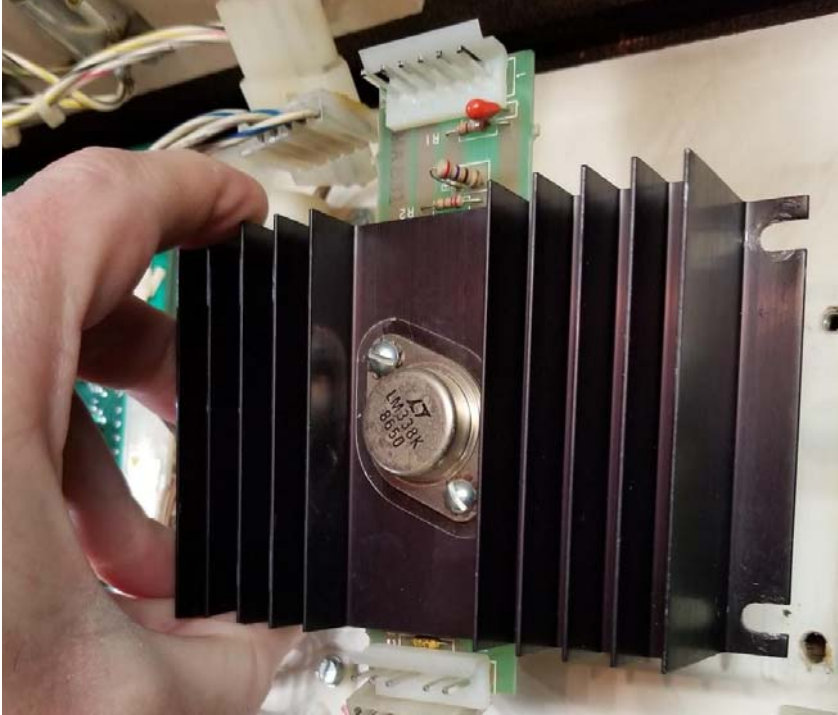

2. Using the provided nylon spacers and screws (Medium Phillips) mount the new board in the head using the existing heat sink mounting T-Nuts. Assembly order is Machine Screw -> Circuit Board Mount hole -> Nylon Spacer -> T-Nut threads in back box.

*** TIP *** start each screw by hand one at a time before tightening down. If a T-Nut is missing a broken you can use a wood screw into the back head wall. Make sure to use an appropriately lengthed wood screw so it does not puncture through the back of the head. Wood screws not included.

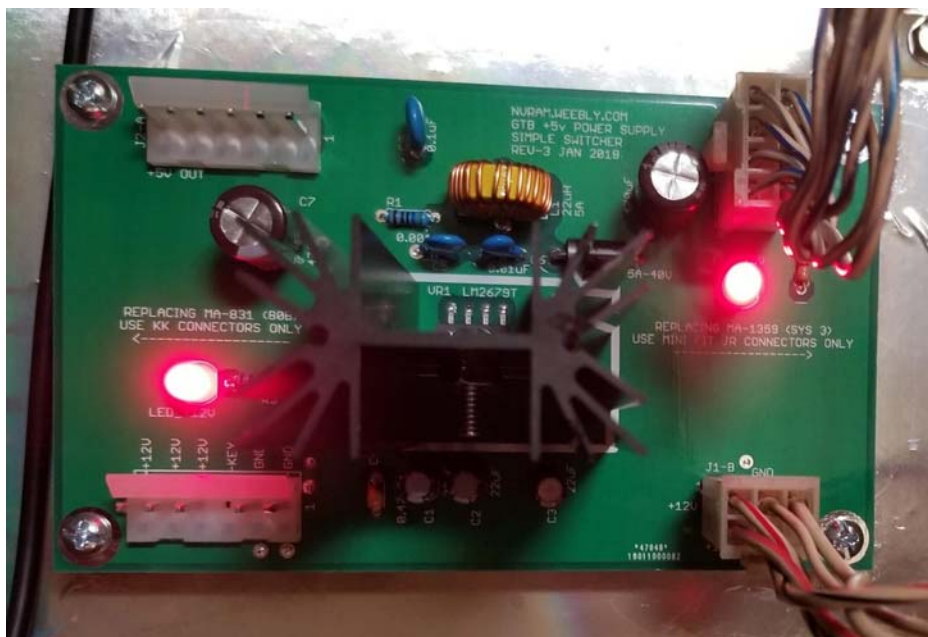

*** NOTES ***

Only one set of connectors will be used depending on the game. 80B (KK) connectors are on the left. Sys 3 (Min Fit jr) connectors are on the right

The four mounting screw points can be used as redundant ground connection point..